


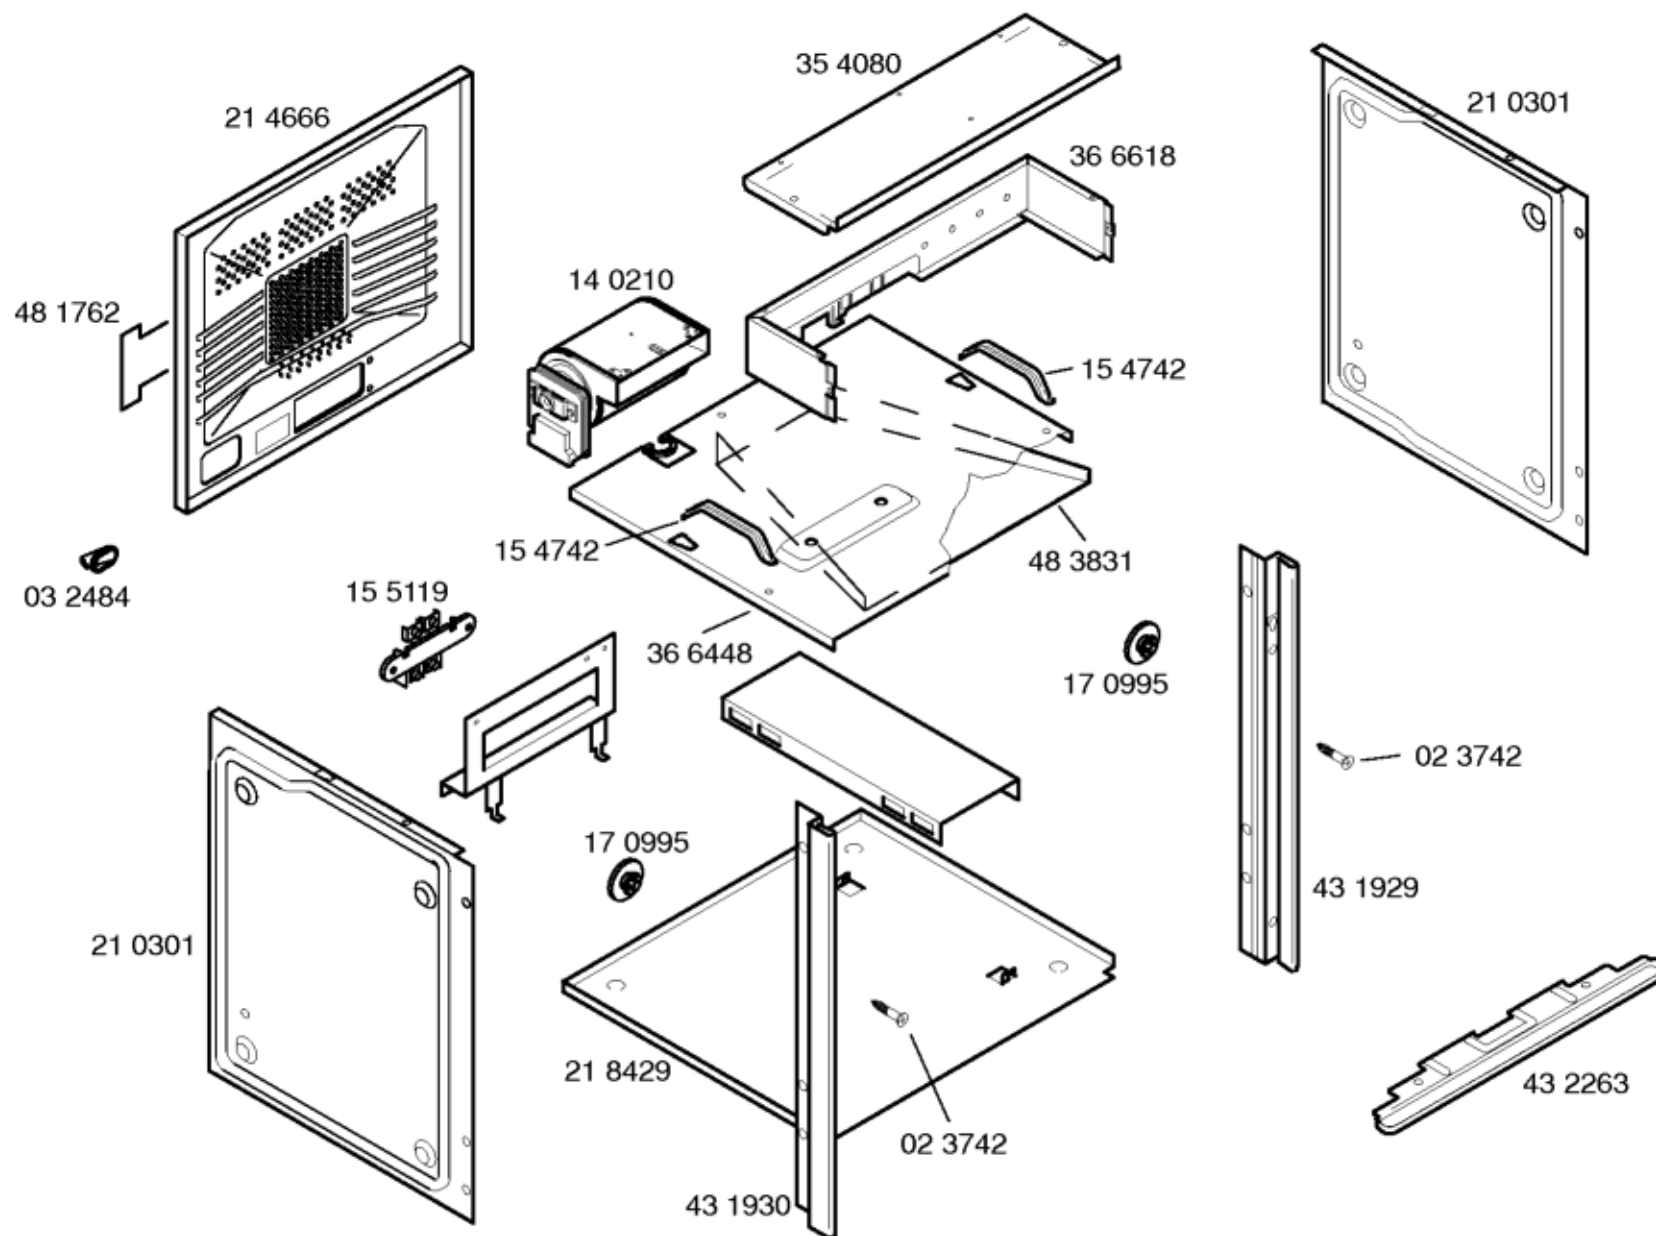


Gebrauchsanweisung
58 6532
(en)
Kochbuch
52 6877
(en)


Zubehör:

Dampfgarer
N8640X2


Backblech, Alu
Z1330X0
Backblech Email
Z1340X2
Brotbackstein
Z1910X0
Nachrüstset Clou4/Kat.
Z1750X0
Auflaufform
Z1270X2
Grillset klein
Z1240X2

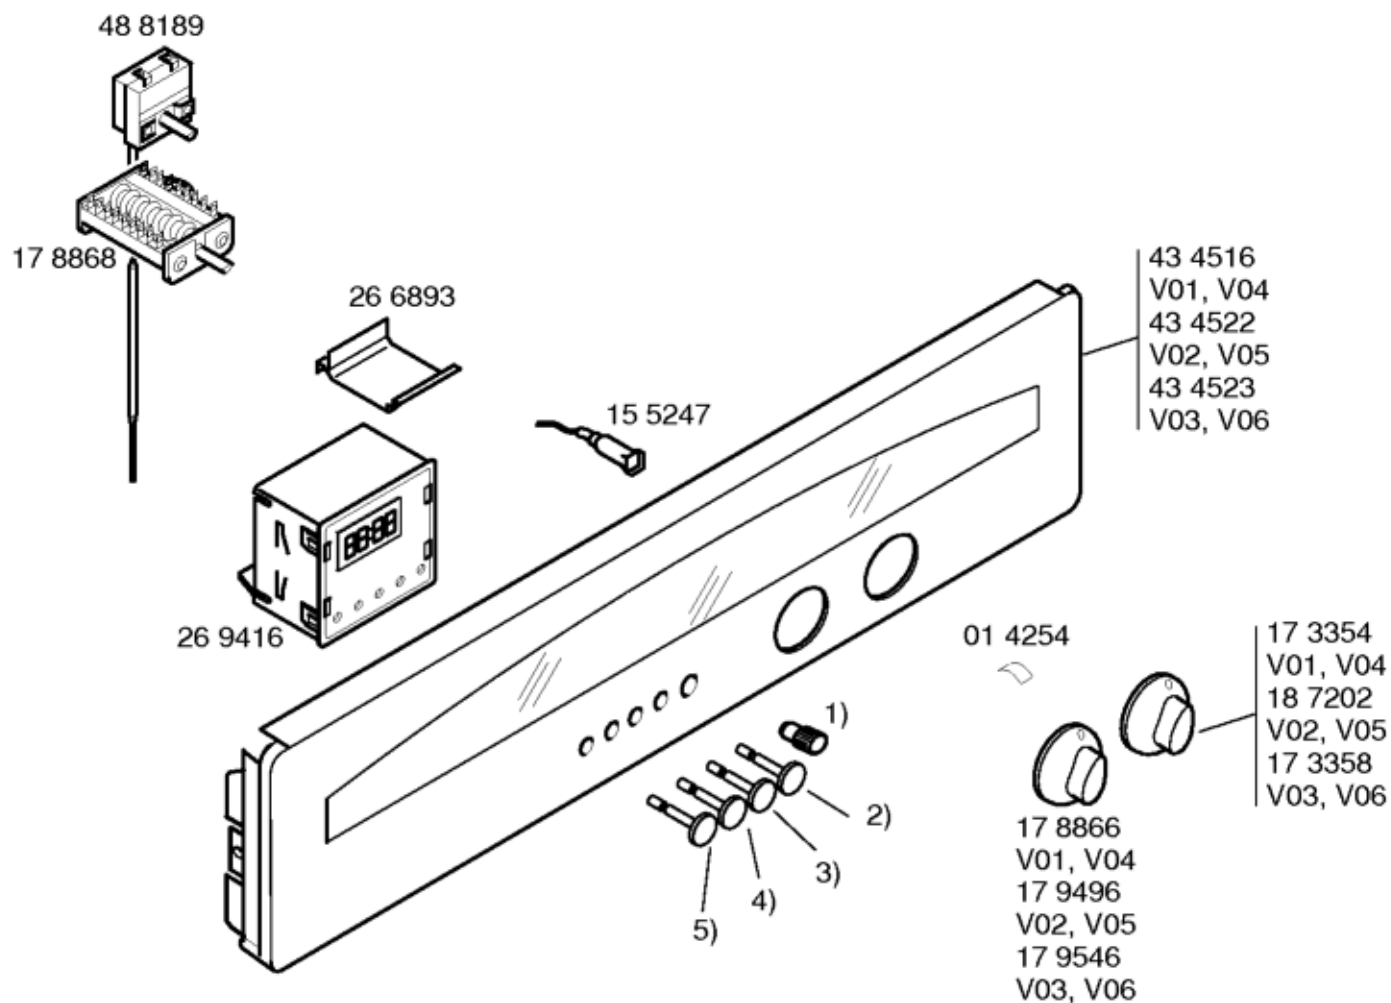

- 1) 15 5262
V01, V04
15 5257
V02, V05
15 5260
V03, V06
- 2) 17 3026
V01, V04
17 3037
V02, V05
17 3022
V03, V06
- 3) 17 3025
V01, V04
17 3036
V02, V05
17 3021
V03, V06
- 4) 17 3024
V01, V04
17 3035
V02, V05
17 3020
V03, V06
- 5) 17 3023
V01, V04
17 3034
V02, V05
17 3019
V03, V06

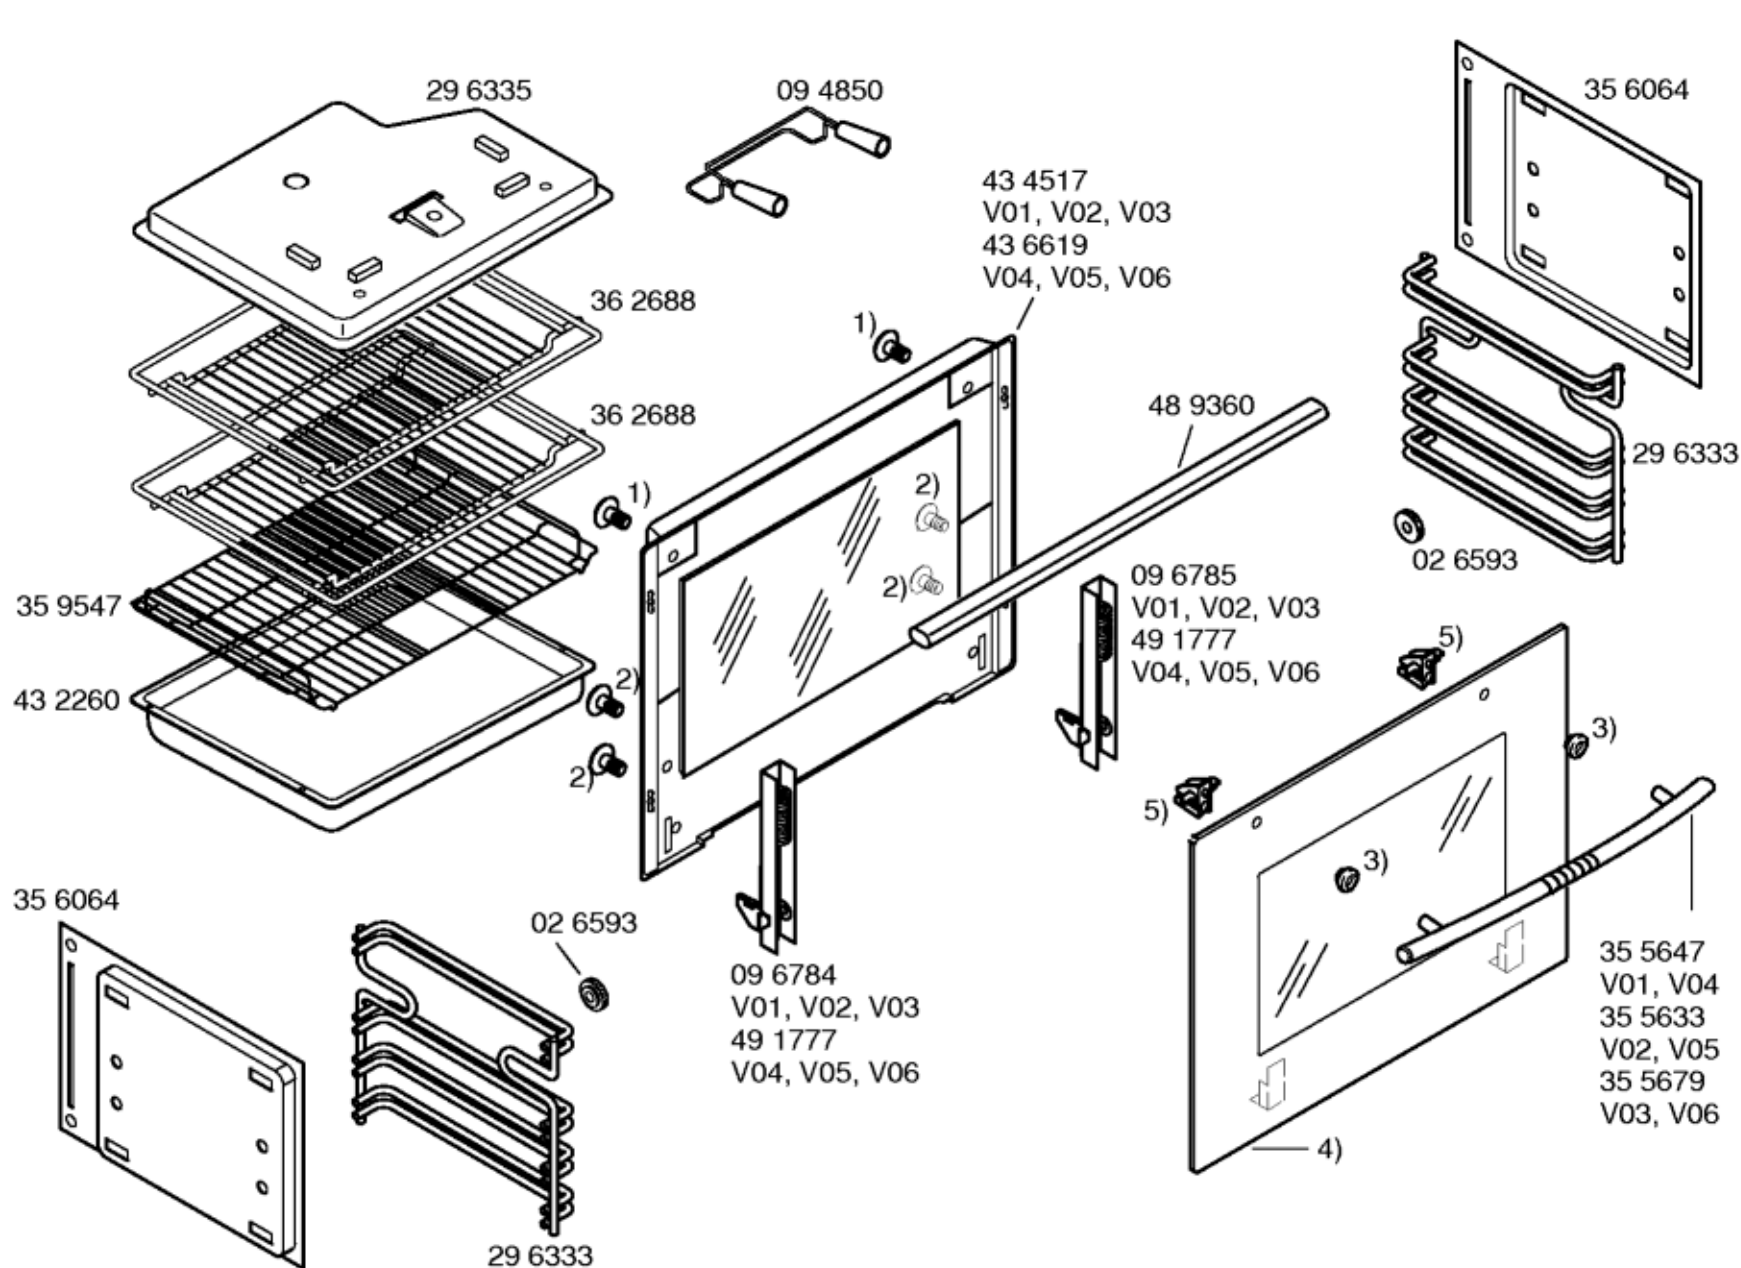

- 1) 15 4762
 - 2) 15 4763
 - 3) 17 1574
 - 4) 35 9548
 - 5) 16 2555
- V01, V02, V03
V04, V05, V06
V01, V04
V02, V05
V03, V06
V01, V04
V02, V05
V03, V06

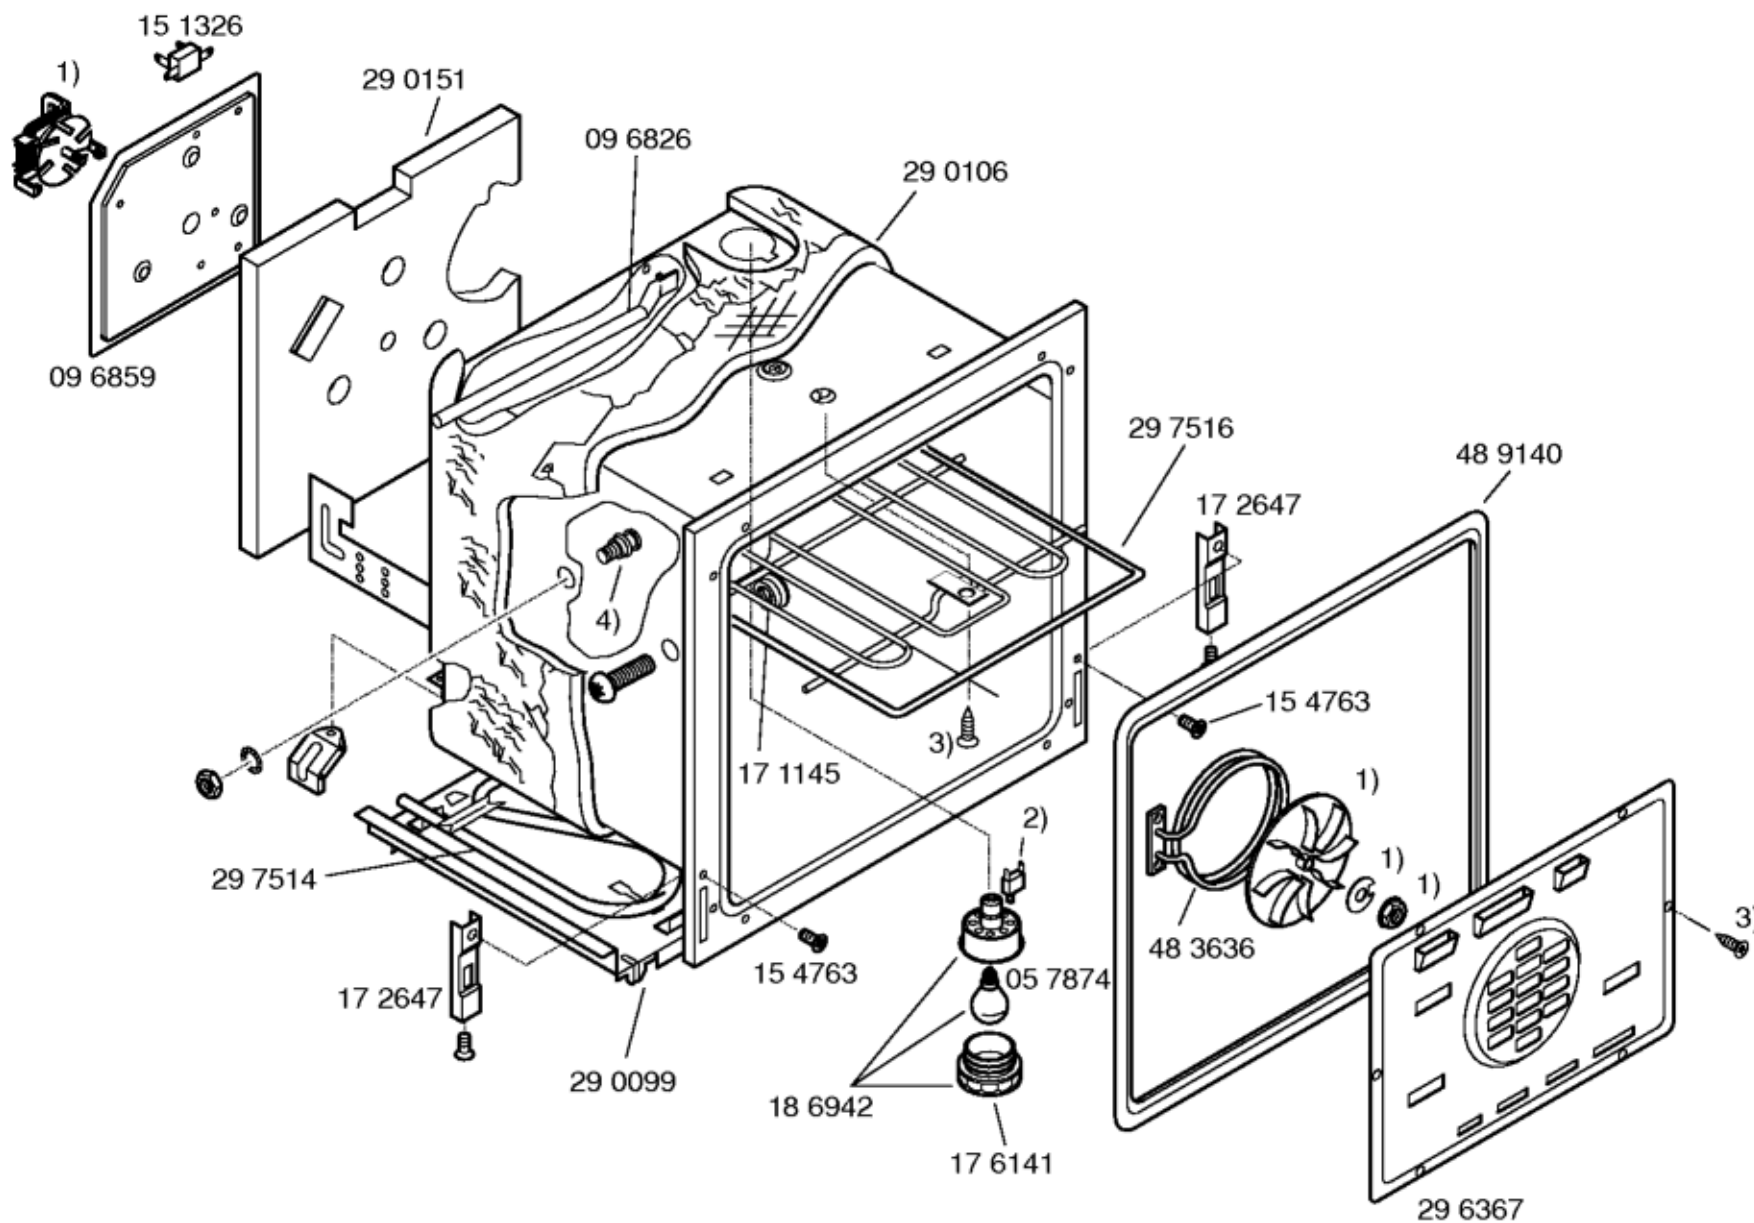

- 1) 26 1674
kompl.
- 2) 15 4836
- 3) 41 8562
- 4) 17 1146

Position ID	Spare part number	Replacement	Description
0101	00586532		Instruction manual
0102	00526877	00585154	Cookery book
0103	00511403	18015229	Directory
0104	00032484		Sleeve
0105	00483831		Ventilation duct
0106	00140210		Fan motor
0107	00481762		Cover
0108	00432263		Strip
0109	00154742		Handle
0110	00366448		Cover
0111	00218429		Case-bottom
0112	00210301		Panel side
0113	00214666		Case-rear part
0114	00155119		Terminal
0115	00170995		Sleeve
0116	00431929		Strip
0117	00431930		Strip
0118	00366618		Screening
0119	00354080		Cover
0120	00023742		Screw
0201	00488189		Regulator-temperature
0202	00187202		Knob-temperature
0203	00179496		Knob-selecting
0204	00155257		Knob-time
0205	00269416		Clock
0206	00434522		Panel-facia

0207	00173034		Key
0208	00173035		Key
0209	00173036		Key
0210	00173037		Key
0211	00266893		Holder
0212	00178868		Switch-selector
0213	00159864		Lamp-control
0214	00014254	00189303	Spring strip
0301	00432260		Universal pan
0302	00359547		Grille
0303	00362688		Grille
0304	00026593		Nut
0305	00296333		Grid
0306	00489360	00489361	Sealing
0307	00359596		Glass front panel
0308	00355633		Handle-door
0309	00094850	00055337	Handle
0310	00296335		Liner-catalytic
0311	00436619		Door-inner
0312	00491777		Door hinge
0313	00491777		Door hinge
0314	00171602		Disc
0315	00162555		Fixture
0316	00154762		Screw
0317	00172646		Screw
0401	00151326		Limiter-temperature
0402	00296367		Liner-catalytic
0403	00297516		Grill heating element
0404	00483636	00499003	Heater-ring

0405	00096859		Sheet
0406	00096826		Tube
0407	00261674	00096825	Blower motor
0408	00290151		Insulating part
0409	00489140		Seal-door
0410	00186942	00420775	Oven lamp with removal tool
0411	00172647		Bearing
0412	00171146		Bolt
0413	00171145		Fixing kit
0414	00290106		Insulating part
0415	00154836		Switch
0416	00418562	00165917	Screw
0417	00418562	00165917	Screw
0418	00154763		Screw
0419	00176141	00647309	Glass light cover
0420	00290099		Sheet
0421	00297514	00142061	Heater-bottom