
Step 46 Canopy & Decals

The Canopy has a line molded into the plastic to follow when trimming the windshield part out, be careful, trim the innermost line leaving the 6mm band for attaching the windshield. Using a sharp hobby knife carefully scribe a line several times into the plastic until you cut through the material. Similarly trim the clear windshield along the provided line, to make it easier to see the line, use a non-permanent marker and trace the line, any extra ink can be removed with rubbing alcohol. Test fit the canopy together by taping it to the canopy, some additional trimming maybe necessary to get a good fit. From Bag 5, the inside canopy mount can be installed (note the direction of the mount) with two 3x6mm Self Tapping Screws,(note: the location for the mount has to be moved 8mm forward of the marked location on the bottom of the canopy). The clear windshield can be attached using six 2x6mm Self Tapping Screws in Bag 4, drill six 1mm holes at the locations shown.

Step 47 Canopy Mounts

The two holes for the rear canopy mount have to be **close the rear and bottom edge as shown** and attach the two rubber mount on canopy.

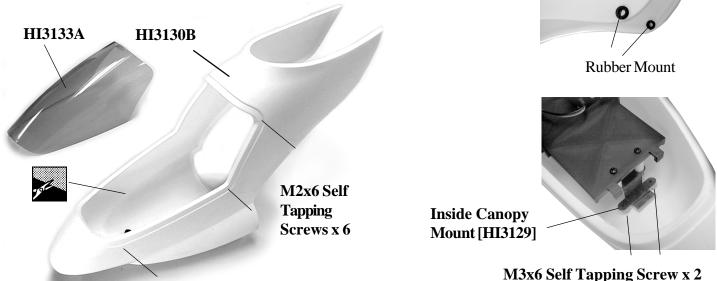

To inprove the adhesion of the decals to the body, peel the decal off the backing and apply one coat of spray adhesive (spray glue) to the sticky side, commonly found in your hobbyshop. For those who would prefer to paint the canopy.

Raven 30/50 decal [HI3131J]

